

Wire **X**pert 500



License Upgrade

USER GUIDE

Upgrading your WireXpert 500

1. Purchase, download and extract the license key(s) that are sent to your email.
2. Create a new folder "Features" in the root directory of a USB flash drive and copy the purchased license files into the "Features" folder of the USB flash drive.
3. Insert the USB flash drive containing the license file(s) to the LOCAL unit of WireXpert.
4. Wait until WireXpert recognizes the USB flash drive and below selection menu appears.
5. Select [Activate License(s)] at the selection screen.




6. If the selection screen does not appear after inserting the USB drive, press the [SETTINGS] button → System Settings → Settings 2 → Storage → USB
7. Or press the [TOOLS] button and select [Licensing] to view the license(s) that are installed or available to purchase for the unit.
8. Select the license(s) to be activated and click the [Activate License(s)] button.
9. WireXpert will restart with the selected license(s) activated.

10. Repeat steps for the REMOTE unit

11. Press the [TOOLS] button and select [Licensing] to verify the license(s) activation.

Note: Depending on the license(s) purchased, you may see different licenses in the "Installed License(s)" box

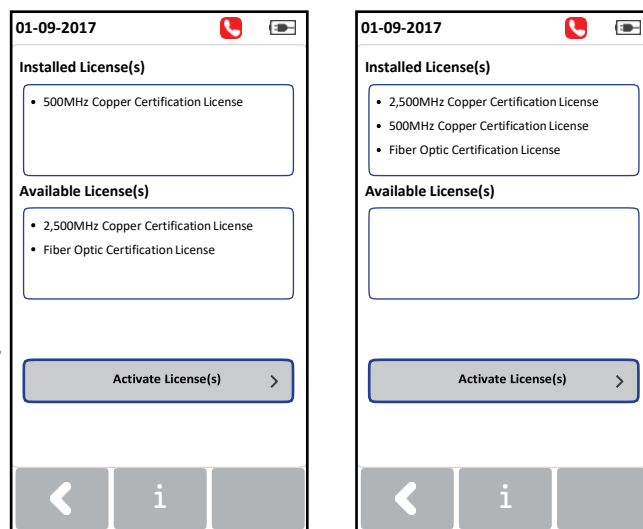

Before upgrading

After upgrading